




1

Handle the papers with gloves, because the hands oil and humidity could stain the paper.

USER INSTRUCTIONS OIL SENSITIVE PAPER

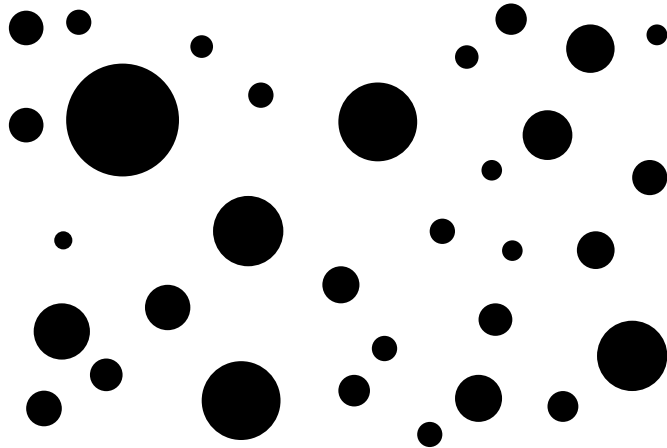

2

The **white side** of the paper is sensitive to oil.




3

The oil sensitive paper was developed to be used in low volume applications. It is indicated for sprays with at least 40% of oil.



4

Do not pressure or scratch the white side of the paper, it could damage the white side of the paper and interfere, difficultating the analysis.

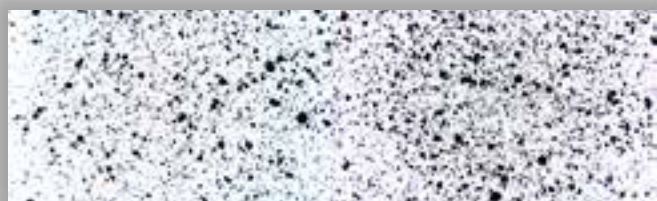

6

It is recommended to analyse the oil sensitive papers utilizing the following softwares.



5

The following procedures are recommended for very fine droplets analysis:

For spray mixes containing between 50 to 60% of oil, it is recommended to analyse until 1 hour after pulverized. Spray mixes containing more than 70% of oil, analyse until 4 hours after pulverized. Above 70 per cent of oil, the oil sensitive papers present good stability.

For more information

VISIT OUR WEBSITE



55 44 99962 5069
rtadel@gmail.com

55 46 99923 0623
wspaperbrasil@gmail.com

www.wspaper.com.br